







## Univerzálny tester osvetlenia prívessu : Typ : TMP 01/ Universal-Tester Lichter

Diagnostický tester k modelom ovládania osvetlenia prívessu :

Funkcie a parametre testera : Funktion und Parameter

PIN:	Symbol:	Zaťaženie:LAST	Opis / upozornenia: Beschreibung/ Warnungen
<b>6 / 54</b> STOP		10W	Minimal Spannung ist 6V für Dioden Ausschaltung.  Napätie zopínajúce kontrolky signalizujúce v testri : <b>6V</b>
<b>2 / 54G</b> Hmolvé/Nebeleucht e		10W	
<b>7 / 58L</b> Ľavé svetlo/Links Licht		2W	
<b>5 / 58R</b> Pravé svetlo/Rechte Licht		2W	
<b>1 / L</b> Ľavá smerovka/Blinker		2W	
<b>4 / R</b> Pravásmerovka/Blin ker rechts		2W	

### Tester

**TEST für MP1v1 a1v2P:**

Drucken sie 1/L,- Indikator in Auto, zeigt das Blinkerlicht ist ausgebrannt.