



[1] Complete kit TBM-2C-G8-P2P-003


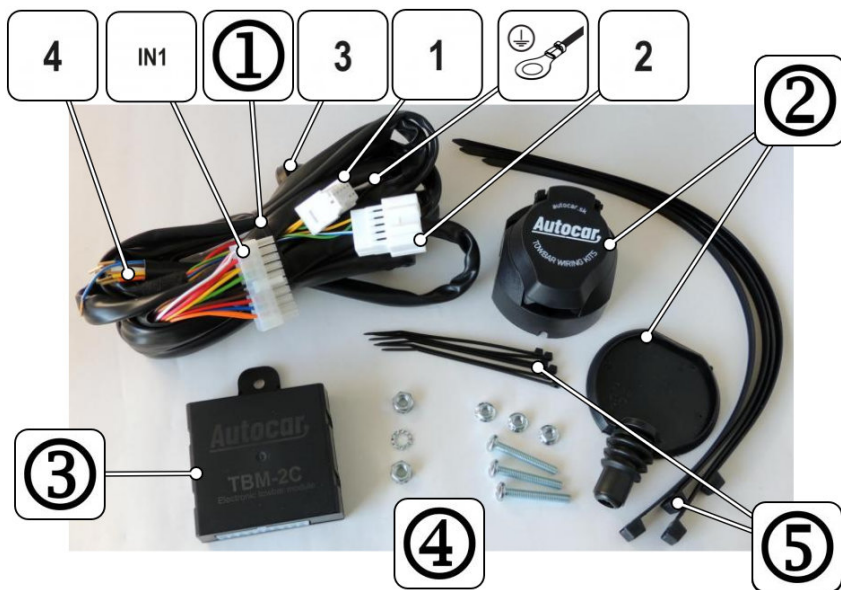



①	Dedicated cable harness P2P:
1	Female plug (to dedicated connector in the car)
2	Male plug (to dedicated connector in the car)
3	Cable entry seal
4	Cable harness to the G13 socket
IN1	20-pins plug (to the TBM-2C module)
⊕	GND connector
②	G13 socket with angle seal
③	TBM-2C - control module
④	Screw set (for mounting the G13 socket and attaching the module and grounding connector)
⑤	Set of cable ties

[2] Installation area

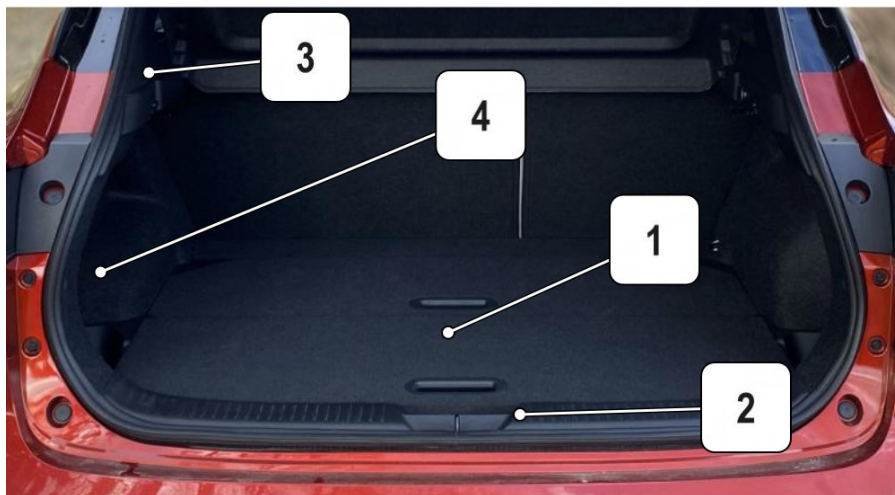


The entire installation is carried out within the vehicle's trunk space	
1	Remove the trunk floor carpet
2	Remove the trunk sill trim
3	Remove the left upper cover
4	Fold down the left side of the trunk

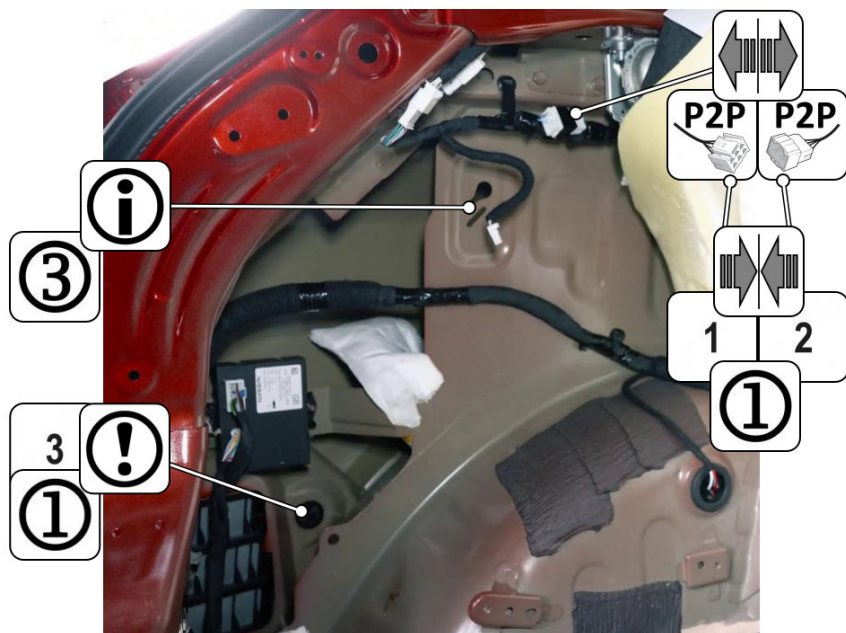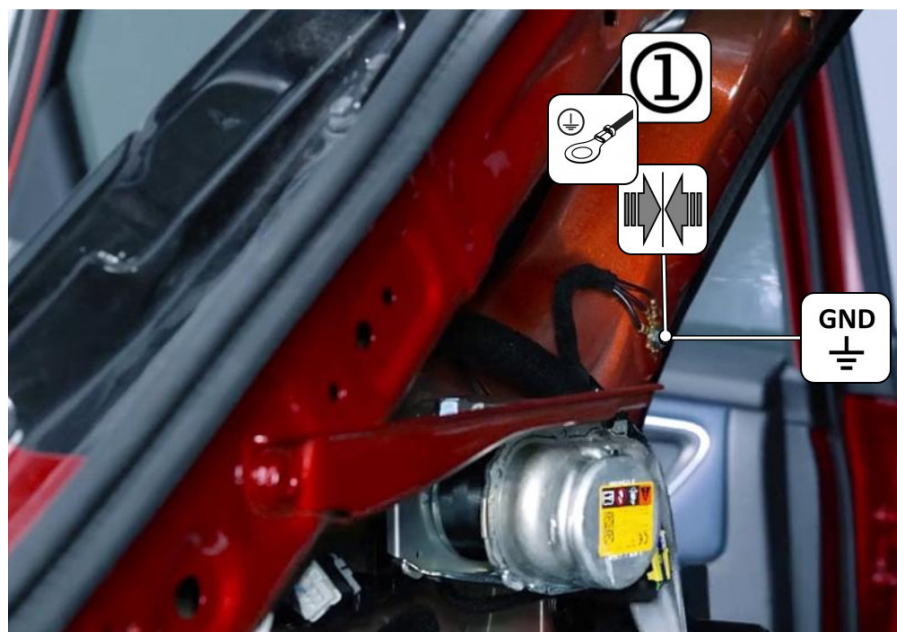[3] Connections of the P2P cable harness in the trunk**[4] Connection of the GND connector**

GND  Point of connection the GND connector

[5] Description of the connections in the trailer socket

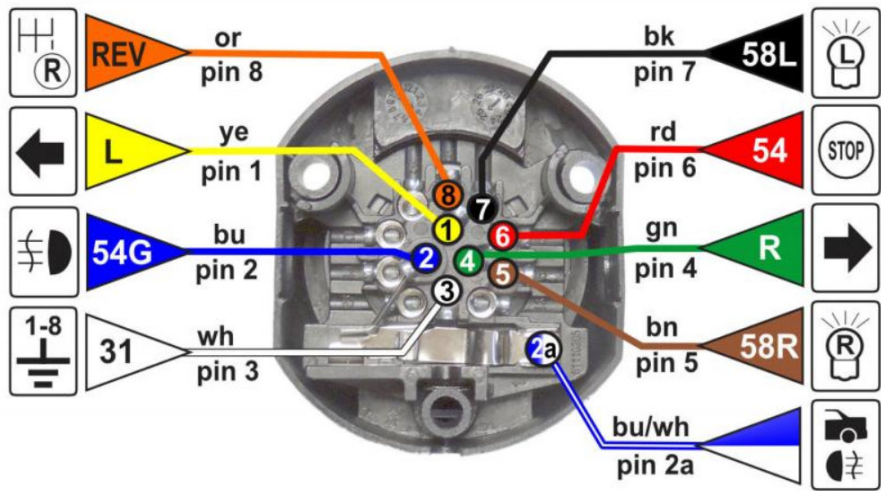

i	pin 1 (ye) yellow
	pin 2 (bu) blue
	pin 3 (wh) white
	pin 4 (gn) green
	pin 5 (bn) brown
	pin 6 (rd) red
	pin 7 (bk) black
	pin 8 (or) orange
pin 2a (bu/wh) blue/white	