


### [1] Complete kit MP2S-CAN-G8 Prg67



①	Module MP2S-CAN
②	P2P harness of CAN-Bus signals and power supply
IN1	- female plug (to dedicated connector in the car)
2	- power and CAN-Bus plugs [connect to module (1)]
③	Cable harness with G13 socket
⊕	- GND connector
3	- outputs to socket G13 [connect to module (1)]
④	Cover of the G13 socket
⑤	Screw set for G13 socket


### [2] Installation area

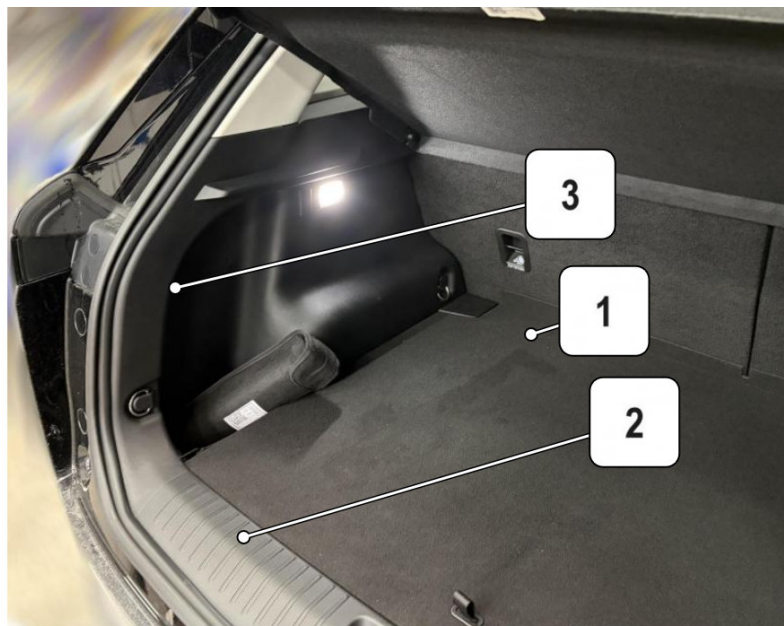

The entire installation is carried out within the vehicle's trunk space


1	Remove the trunk floor carpet
2	Remove the trunk sill cover
3	Fold back the left side of the cover trunk

### [3] Mounting locations for the car wiring harness components

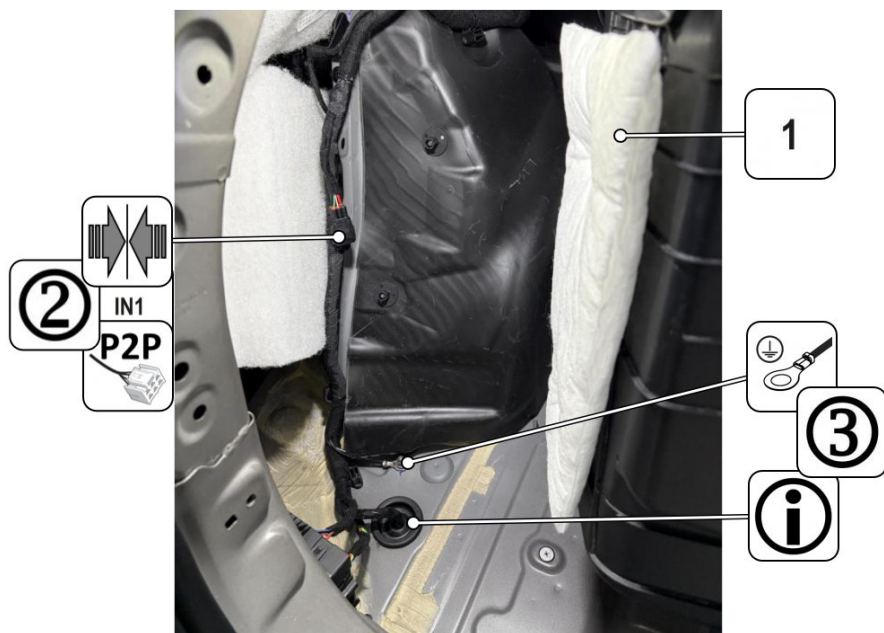

	To connect the P2P plug of the harness (2) to the factory P2P connector
	Location for connecting the GND connector from cable harness (3)
	Location of the cable grommet for route of the cable harness to the trailer socket
1	Folded left side of the cover

### [4] Description of pins in the trailer socket

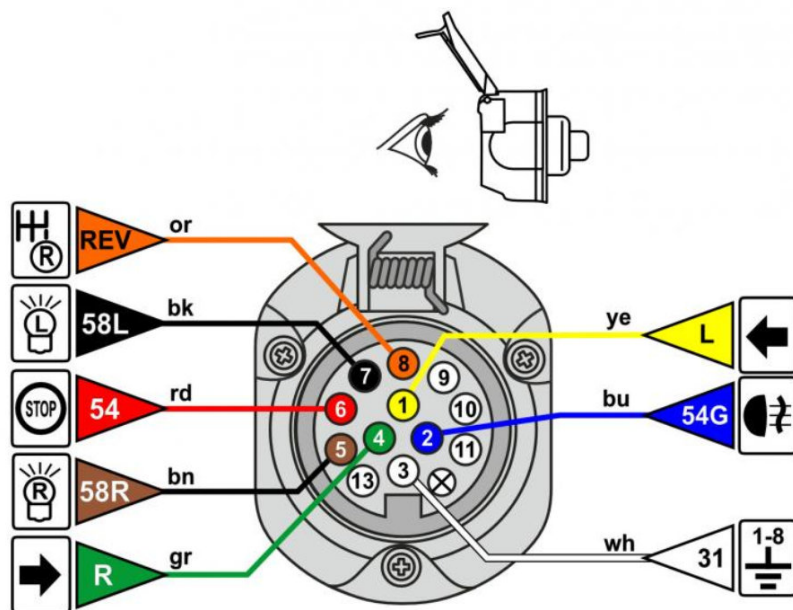

	pin 1 (ye) yellow pin 2 (bu) blue pin 3 (wh) white pin 4 (gr) green pin 5 (bn) brown pin 6 (rd) red pin 7 (bk) black pin 8 (or) orange
--	---