


### [1] Complete kit MP2S-CAN-G8 Prg67



①	Module MP2S-CAN
②	P2P harness of CAN-Bus signals and power supply
IN1	- female plug (to dedicated connector in the car)
2	- power and CAN-Bus plugs [connect to module (1)]
③	Cable harness with G13 socket
+	- GND connector
3	- outputs to socket G13 [connect to module (1)]
④	Cover of the G13 socket
⑤	Screw set for G13 socket

### [2] Installation area

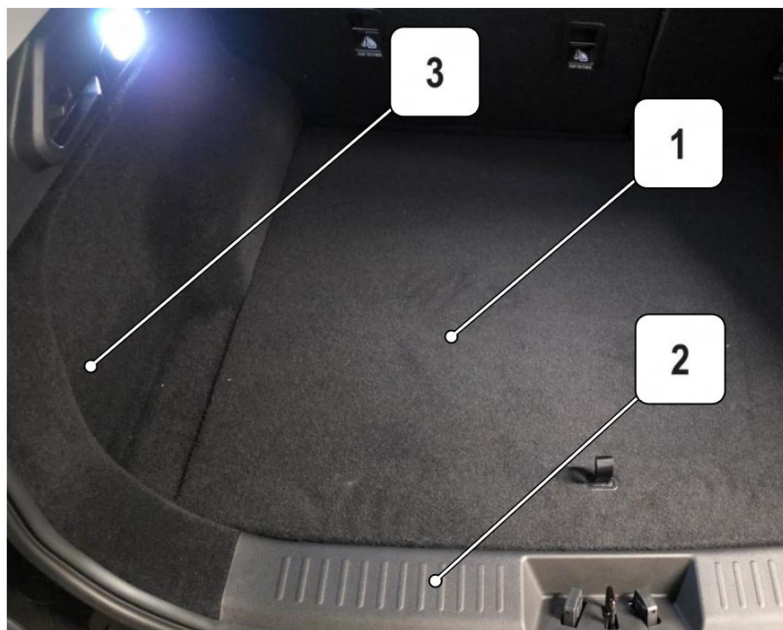

The entire installation is carried out within the vehicle's trunk space	
1	Remove the trunk floor carpet
2	Remove the trunk sill cover
3	Fold back the left side of the trunk

### [3] Factory connector location



Folded left side of the trunk



Location of the factory P2P connector for connecting the towbar wiring harness

### [4] Connection of the wiring harness to the vehicle's electrical system



To connect the P2P plug of the harness to the factory P2P connector




Location for connecting the GND connector from the cable harness




Module mounting location

## [5] Location of the cable grommet for routing the wires to the G13 socket

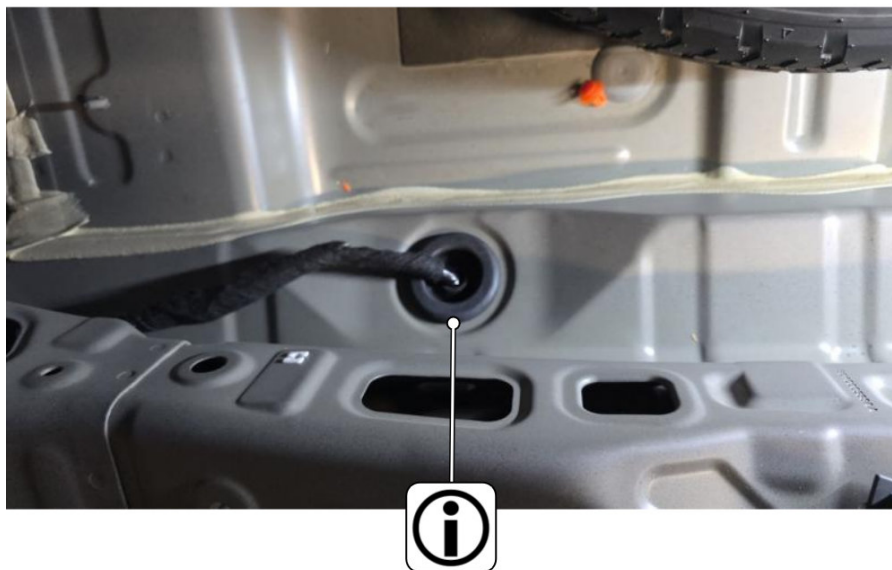

**i** Cable grommet – accessible after removing the trunk sill cover

## [6] Description of pins in the trailer socket

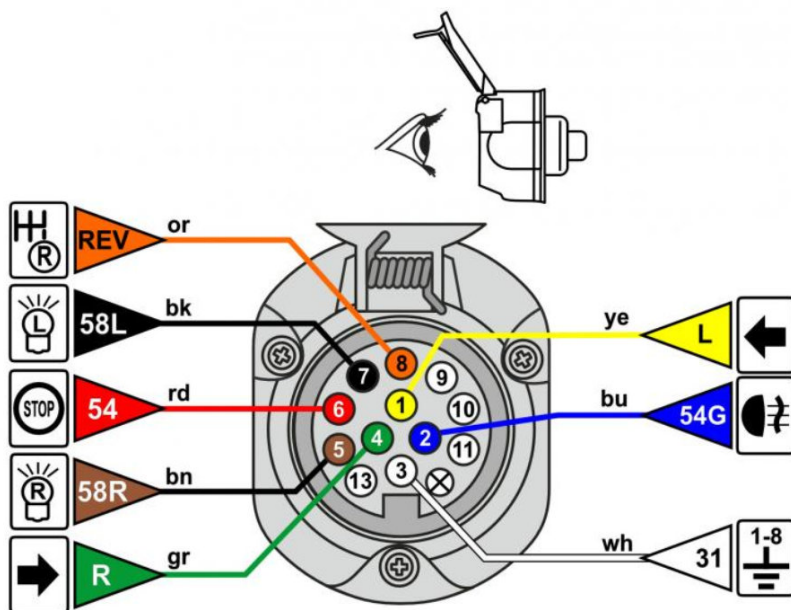

**i** pin 1 (ye) yellow  
pin 2 (bu) blue  
pin 3 (wh) white  
pin 4 (gr) green  
pin 5 (bn) brown  
pin 6 (rd) red  
pin 7 (bk) black  
pin 8 (or) orange